



# Riveter

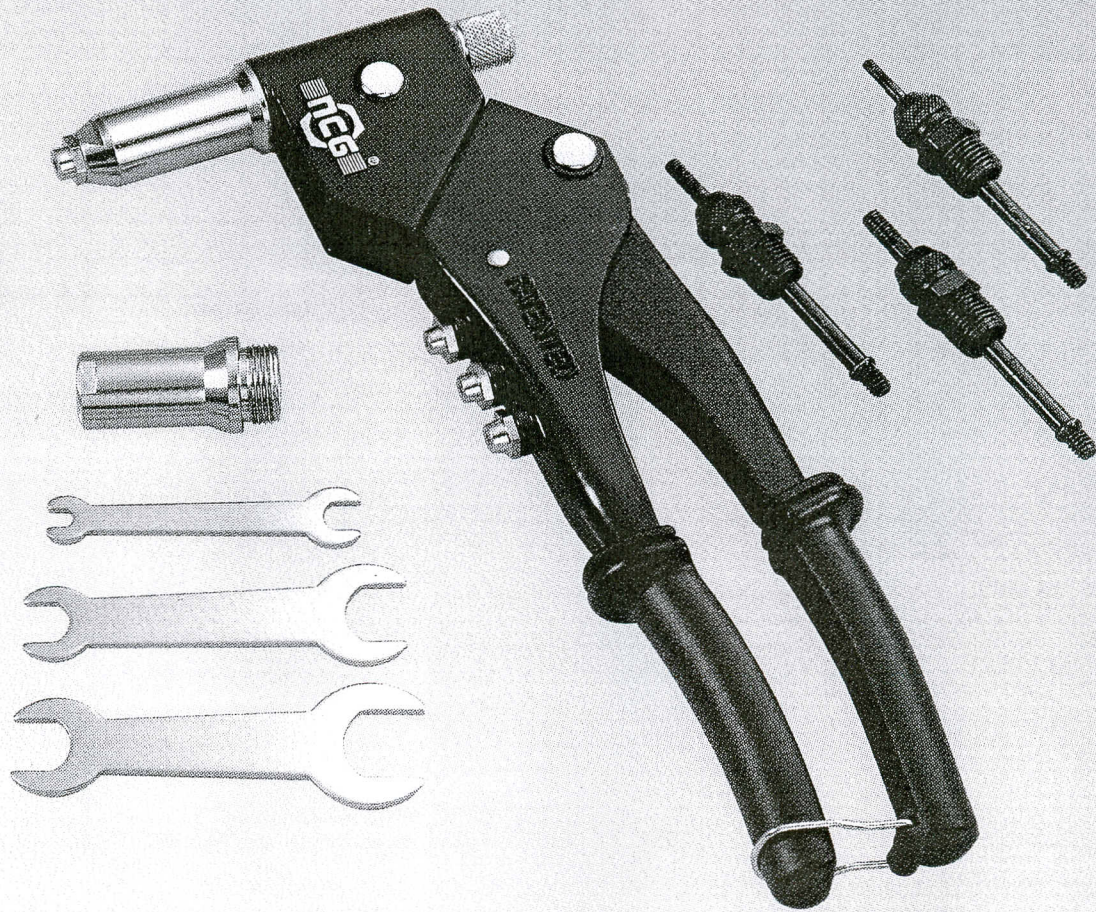

pull bar

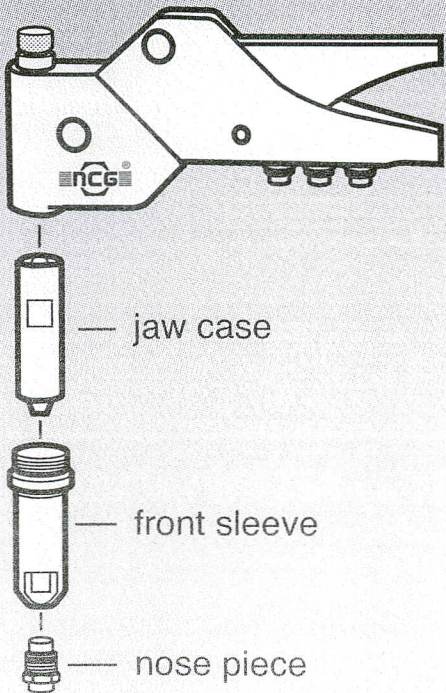

jaw case

front sleeve

nose piece

## Instruction for rivets

1. Drill a hole in the workpiece first.
2. Select the appropriate nose piece for the chosen rivet.
3. Release and open the handles.
4. Put the rivet into the nose piece of the riveter and set it into the hole of the workpiece.
5. Tighten the handles. The rivet should be cut in 1 or 2 operations.
6. Release the handles and remove the mandrel from the nose piece after completing work.

RIT901  
#27819010